

JuiceBox OpenPay

User Manual

ENGLISH



Table of contents

Welcome to JuiceBox OpenPay	3
Installation Area	3
Installation	4
Enterprise Setup	5


Welcome to JuiceBox OpenPay

Installation Area

The JuiceBox OpenPay requires 2 sets of THHN wires (per National Electrical Code (NEC) and/or local Authority Having Jurisdiction (AHJ) requirements and each set must have a dedicated ground conductor). Each set connects to a separate 50A breaker.

All wires must protrude at least 14 in (36 cm) from the base of the installation area so that the connections can be housed inside the junction box.

The base of the JuiceBox OpenPay is secured to 4 1/2 in ground studs which are positioned 10 1/2 in apart.

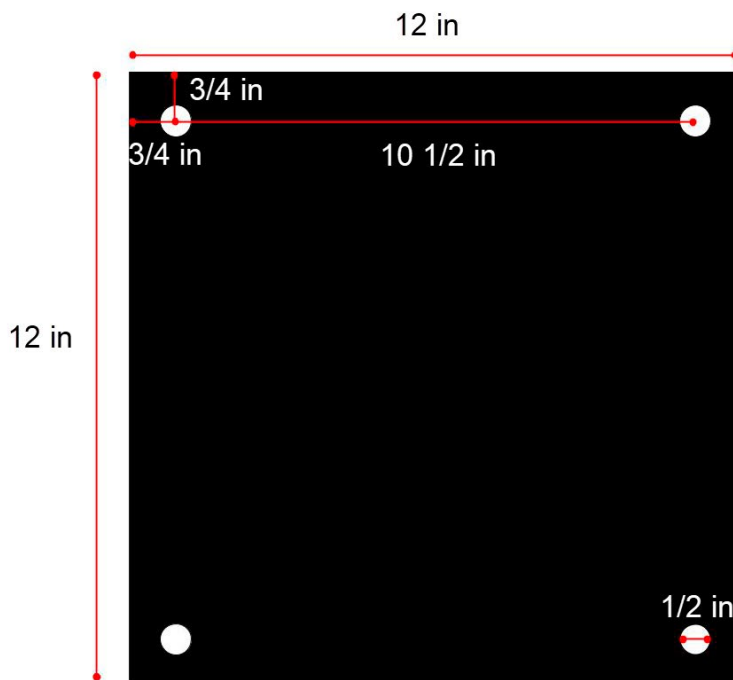

NOTE: Image not to scale.

Installation

1. Turn off the mains power to the hardwire connections.
2. Use a multimeter to ensure that there is no power at the hardwire connections.



WARNING: Do not continue with the installation until the multimeter shows that there is no power at the hardwire connections to mains.


3. Use a Phillips bit to release the fasteners (x4) that secure the junction box cover. Set the fasteners and cover aside.



4. Install the JuiceBox OpenPay onto the ground studs.
5. Route the mains hardwire connections through the hole in the base of the junction box.
6. For each set of 3 HV cables, connect the cables to the mains hardwire connections.



NOTE: If necessary, cut the high voltage cables and insulation to an appropriate length, depending on the installation.

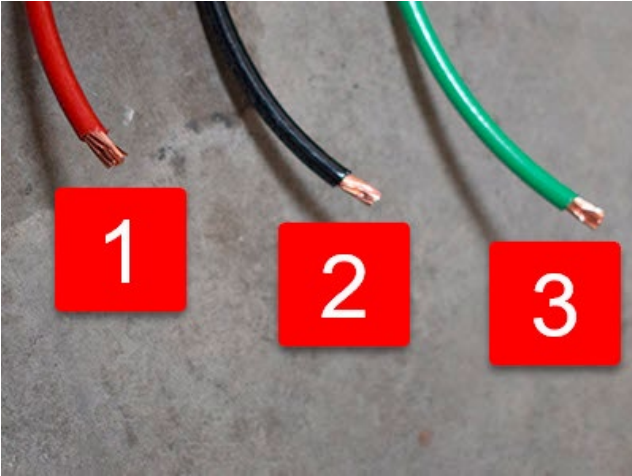

1	Positive
2	Negative
3	Ground

7. Reinstall the junction box cover.
8. Reconnect power to the hardwire connections. The JuiceBox OpenPay turns on automatically. Follow the onscreen instructions.

The JuiceBox OpenPay can not charge a vehicle until Enterprise Setup is complete. Continue to [Enterprise Setup](#) to fully activate the JuiceBox OpenPay.

Enterprise Setup

For more information, refer to [Enterprise Setup](#).